

Replacement Parts for PressCommander Resolver Based Controls (All Models/Styles)

REPLACEMENT PARTS LISTING

Part Number	Description
11-157	Panel Mount (with Gasket)
11-167	Shield cover for Display unit
11-168	Shield cover for master/slave/power board stack
20-022	1A Slo-Blo nano SMF fuse
20-023	5A Fuse (white nano)
26-091	Display Overlay
30-009	Tonnage Controller (3 or 4 channel)
30-010	Tonnage Sensor & 35' of cable
30-013	Tonnage Controller (1 or 2 channel)
32-002	Output Relay (black G6B-1174P)
32-006	Output Relay (black G6B-2114P)
32-101	4 pole 12 VDC (clear KACO safety relay)
35-111	Ethernet Module with software (factory installed & replaced)
35-065	EEPROM Job memory chip (100 jobs) (59 jobs with optional expander board)
35-120	Job memory chip for the PressCommander only (150 jobs) (100 jobs with optional expander board)
37-040	Solid State output relay (factory installed and replaced)
39-151	10.1" color touchscreen
39-084	RUN/PROG keyswitch, key, and cable
45-020	Resolver cable (30') with connectors
45-027	Display data/power cable (6' standard size)
45-029	Display data/power cable (15' extended length for remoting Display unit)
52-227	Resolver unit (no cable) (formerly 40-003)
52-245	PCS Display board (with job memory and VFD display)
52-246	PCS Master board
52-247	PCS Slave board
52-248	PCS Power supply / Relay output board (with relays and fuses)
52-251	Ribbon Cable Assembly
52-271	Master/Slave 9 conductor Input Cable (4.5')
52-279	Expander Board (requires DeviceNet Plug on back of Display Unit)
52-280	Expander Power supply (stacks under Expander board)